



INSTALLATION INSTRUCTIONS


Step 1: Draw a level horizontal line 13 1/2" inches down from the header. The level line will be the top of the capitals. (See Picture 38a, 38b)



Step 2: Glue the provided alignment keys into header. (See picture 38c)
Slide header into place, assuring that it is placed at the level lines and centered in opening. Nail header unit to wall after pre-drilling.



Step 3: Slide and fasten capitals in place using provided alignment keys. (See picture 38d)

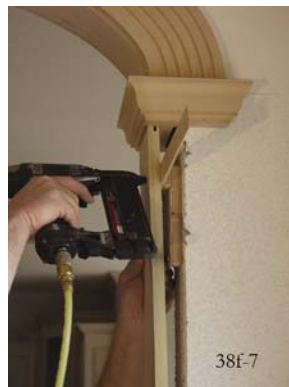

Step 4: Measure and cut jamb to length off the opposite end as slot. (See picture 38e)

Step 5: Glue, slide and nail jamb in place using the provided 3/16" spline. Some sizes may need shims (See picture 38f).

Step 6: Install vertical casing and plinths same as conventional moulding using a 3/16" reveal.(38g).